

27.07.2016

FINERO

The Quality Control Company

Product Item	Product	Price (EUR)
2283	FST-DCP-1500-05 Power Supply	ON REQUEST
4920	FST-DCP-1500-1 DC-power supply	ON REQUEST
2746	FST-110 AC Hipot tester 10mA/100mA range	ON REQUEST
5408	FST-110 AC Hipot tester 2mA/10mA range	ON REQUEST
6057	FST-110 AC Hipot tester 10mA/30mA range	ON REQUEST
5680	FST-110 AC/DC Hipot 10mA/100mA range	ON REQUEST
5681	FST-110 AC/DC Hipot tester 2mA/10mA range	ON REQUEST
5787	FST-112D Dual HiPot	ON REQUEST
5791	FST-114Q Quad HiPot	ON REQUEST
2747	FST-120 Insulation Resistance Tester	ON REQUEST
2748	FST-130 PE-Continuity Tester	ON REQUEST
2749	FST-140 Leakage current tester with power supply	ON REQUEST
2474	FST-140 Leakage current tester without power supply	ON REQUEST
2750	FST-150 Relay matrix, incl. Controller board	ON REQUEST
2751	FST-160 Power supply unit	ON REQUEST
5959	FST-200 4 S Analyzer, AC-HiPot without interface	ON REQUEST
5960	FST-200 4 S Analyzer, AC/DC-HiPot without interface	ON REQUEST
5770	FST-200 4 S Analyzer, AC-HiPot with GP-IB interface	ON REQUEST
5772	FST-200 4 S Analyzer, AC-HiPot with RS-232 interface	ON REQUEST
5948	FST-200 4 S Analyzer, AC/DC-HiPot with GP-IB interface	ON REQUEST
5949	FST-200 4 S Analyzer, AC/DC HiPot with RS-232 interface	ON REQUEST
5961	FST-210 3 S Analyzer, without interface	ON REQUEST
5886	FST-210 3 S Analyzer, with GP-IB interface	ON REQUEST
5887	FST-210 3 S Analyzer, with RS-232 interface	ON REQUEST
Option Item		
	MEASURING MODULES	
	Power cord (according to local requirements) all types	Incl. All types
5324	Transport case (plastic/aluminum) for FST-series equipment	
5946	Safety circuit connector D25	Incl. All types
3938	FST-110-MM, 10/100mA for AC/DC measurement	Incl.FST-110 Hipot tester 10mA/100mA range
3362	FST-110-MM, 2/10mA, for AC/DC measurement	Inc. FST-110 Hipot tester 2mA/10mA range
3939	FST-120-MM	Inc. FST-120 Insulation Resistance Tester
3940	FST-130-MM	INC. FST-130 PE-Continuity Tester

3941	FST-140-MM	Inc. FST-140 Leakage current tester with/without power supply
	COMMUNICATION INTERFACES	
2752	FST-interface RS-232 Note 1,2	ON REQUEST
2753	FST-interface GP-IB (IEEE488) Note 1,2	ON REQUEST
2159	USB Interface for FST series Note 1,2	ON REQUEST
5458	Interface Ethernet for FST series. Note 1.2	ON REQUEST
	SOFTWARE LISENCES	
3935-5	Safetest 100b multisystem lisenca, up to 5 test systems	ON REQUEST
3935-1	Safetest 100b lisenca, Single test system	ON REQUEST
3935-1+	Safetest 100b lisenca, additional test system to single lisenca	ON REQUEST
0971	FST-LabVIEW driver	ON REQUEST
		ON REQUEST
	Accessories	ON REQUEST
1431	High Voltage pistol with connector SP-02 2m cable	ON REQUEST
2757	High Voltage pistol with connector SP-02 2m cable	ON REQUEST
2757	High Voltage pistol with connector SP-02 5m cable	ON REQUEST
3887	High Voltage pistol with connector SP-03 2m cable	ON REQUEST
2758	High Voltage pistol with connector SP-03 5m cable	ON REQUEST
6156	High Voltage pistol with connector SP-02 2m cable (Including connection box)	ON REQUEST
6157	High Voltage pistol with connector SP-02 5m cable (Including connection box)	ON REQUEST
6158	High Voltage pistol with connector SP-03 2m cable (Including connection box)	ON REQUEST
6159	High Voltage pistol with connector SP-03 5m cable (Including connection box)	ON REQUEST
2913	High Voltage test lead 1,5m, red	ON REQUEST
5940	Crocodile HV-clip 5 kV, red	ON REQUEST
2912	High Voltage test lead 1,5m, black	ON REQUEST
5951	Crocodile HV-clip 5kV, black	ON REQUEST
0121	PE Probe, remote controlled	ON REQUEST
1296	PR1/HV,ISO, PE,FU Schuko-socket, 2m cable	ON REQUEST
2519	Safety block/HV,ISO, 2m cable	ON REQUEST
5950	PE-cable 2m, red with crocodile clip	ON REQUEST
1731	PE-cable, 2m, black with crocodile clip	ON REQUEST
4614	High voltage relay card RK-4314, 4 pcs HV-relays	ON REQUEST
2975	HV Relay card RK-4069, (8 pcs relays)	ON REQUEST
3395	Relay card RK-3797, 8 pcs relays	ON REQUEST

NOTE! Ask the customer whether the FST – series tester is intended to be controlled manually or PC structurally. If the tester is PC controlled, an interface is required, which affects to the buildup of the tester.

EXPLANATIONS:

1 = Only one of these four interface types is required to enable communication interface between PC and one of the FST 110 - 150 testers.

2 = Includes one RS485 interface, which is used for internal communication between numerous FST 110 - 150 testers.

x = Optional, additional price

Incl. = Included in the product's price